

NEW-HANK
QUALITY AV PRODUCTS

USERMANUAL
MP103 USB



Introduction	3
Frontpanel features	4-5
Backpanel function description	6
Safety	7

Introduction

Thank you for buying this NewHank product. Please read through these operating instructions so you will know how to operate your model properly.

After you have finished reading the instructions, ut them away in a safe place for future reference.

Box Content

CD Player
IEC power cord
Remote control
RCA Cable

Ground rules for installation

Make sure all items listed in the BOX CONTENTS section are included in the box.

Place mixer in an appropriate position for operation.

Make sure all devices are turned off and all faders and gain knobs are set to "zero."

Connect the stereo outputs to power amplifier(s), tape decks, and/or other audio sources.

Plug all devices into AC power.


Switch everything on in the following order:

1. Audio input sources (i.e. turntables, CD players, etc.)
2. Mixer
3. Last, any amplifiers or output devices

When turning off, always reverse this operation by:


1. Turning off amplifiers
2. Mixer
3. Last, any input devices

Front panel features

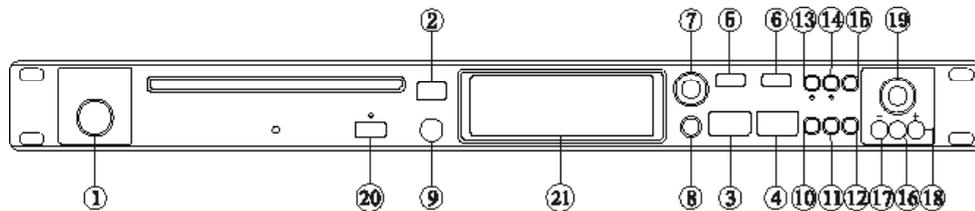

1. Power : Push this button to turn power on and off, the button lights red when the power is on.
2. Eject : Push this button to load or eject the disc, the disc will not eject during playback. Stop playback before pushing the eject button.
3. Cue : Pushing this button will set the current search point as a new Cue point. (Cue)
4. Play/Pause : Push once to start playback, once again to pause playback, and once more to resume playback.
5. Rewind button: Push this button to rewind the search.
6. Fast forward button: Push this button to fast forward the search.
7. Skip (Track Select) : Turn this knob to select a track, by pushing this knob down while turning, the tracks will change by 10 tracks at a time.
8. Remote Sensor: Infrared remote control receiver unit.
9. Disc/USB : Push this button to switch between CD input or a USB device.
10. Repeat : Use this button to repeat the selected track (repeat1) or to repeat all the tracks of the cd (repeat all).
11. S./C. (Single and Continuous mode) : Toggles between Single and Continuous mode.
 Single mode: Playback will stop when a track ends.
 Continuous mode : When a tracks ends, the next track will play automatically and the CD itself will stop when the last track has played.
12. Time : Push this button to toggle between elapsed time, remaining time or total remaining time.
 Elapsed time: Showing the elapsed time of the current playing track.
 Remaining time: Showing the remaining time of the current playing track.
 Total remaining time: Showing how much time is remaining of the whole CD.
13. Loop In : Push this button to set a start loop point during playback, when no loop point is set the loop button is flashing.
14. Loop Out : Push this button for setting the end of the loop point and releasing the loop action. To finish loop mode push this button again.
15. ReLoop : Used for repeating the last saved loop, To finish loop mode push this button again.
16. Pitch button: Activates or deactivates the pitch slider by turning the pitch led on or off.
17. Pitch bend - : While pushing Pitch Bend - the play speed decreases, when releasing this button playing speed returns to the previous speed.
18. Pitch bend + : While pushing Pitch Bend + the play speed increases, when releasing this button playing speed returns to the previous speed.
19. Pitch : Use this knob to increase or decrease the speed of the track, the pitch range hold +/- 12 %
20. USB Master: Connect your USB storing device to this device to allow the MP102 USB to read and playback your music files. Via the USB master input only MP3 files can be read.
21. Large LCD display : Indicates all the functions, as they are occurring, with the CD.

Backpanel function description

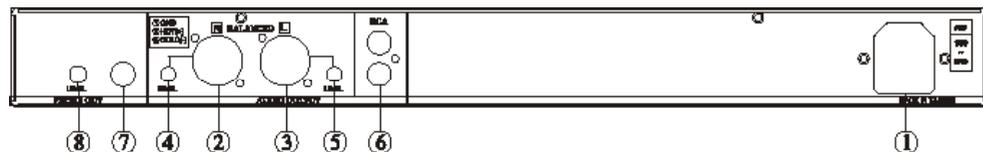

1. IEC Power plug connector : Plug your supplied power cord in here.
2. Balanced right XLR output: Connect these balanced output to a amplifier or active speaker.
3. Balanced left XLR output: Connect these balanced output to a amplifier or active speaker.
4. Balanced output level adjustment knob: By adjusting this knob the volume of the right XLR channel will increase or decrease.
5. Balanced output level adjustment knob: By adjusting this knob the volume of the right XLR channel will increase or decrease.
6. RCA out : Connect these unbalanced output to a mixer, amplifier or active speaker.
7. 6.3 Headphone output: Connect your 6.3 headphone to these output.
8. Headphone volume control: Adjusts the level of the headphone output.

Safety

This equipment is not waterproof.

To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.

To prevent the risk of electrical shock, don't remove cover or back. No user serviceable parts inside. Refer servicing to qualified service personnel only.